


## **INSTRUCTIONS**

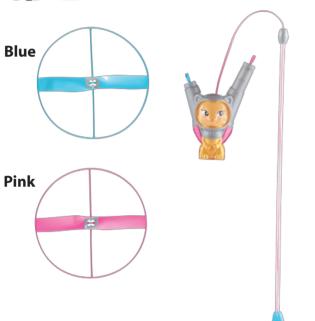





Doll cannot stand alone.

## Note:


- $\triangle$  CAUTION: To prevent entanglement, keep hair away from propellers.
- <u>A</u> CAUTION: Do not attempt to grab the rotating propeller.
- Requires 4 AAA (LR03) alkaline batteries (not included). Dispose of batteries safely.
- Only use the product under the supervison of an adult.
- Take care to ensure during use that there is a sufficiently large space between people, animals and objects.
- Do not put objects into the propeller.
- Do not immerse in water.




Contents: Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

## **BATTERY INSTALLATION:**

Use a Phillips head screwdriver (not included) to open battery door. Insert 4 AAA batteries (not included). Replace battery door and tighten screws. Dispose of batteries safely. Replace batteries when the pet cannot fly. For longer life, use only alkaline batteries. When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries. To avoid accidental operation, remove batteries when not in use.

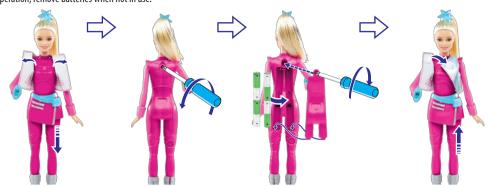

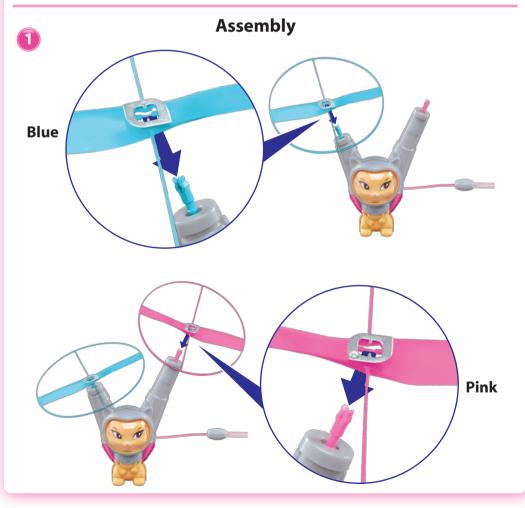



## Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1–800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8,

Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.