



DIGITAL ARTS & CRAFTS STUDIO

Software

www.fisher-price.com

Consumer Information

- Please keep this owner's manual for future reference, as it contains important information.
- Adult assembly is required for installation of this software.
- For proper use of this product, we recommend that your computer meet the minimum system requirements.
- This product must be used with Information Technology Equipment (I.T.E.) listed equipment only.

Minimum System Requirements

Operating System	Windows XP, Windows 2000
Processor	750MHz
Memory	256MB available
Hard Drive	200MB available
Video Resolution*	1024 x 768
Video RAM	64MB
USB port	1.1
Recommended: Color Printer, Internet Connection (for software updates).	

Update Software

For best performance, be sure to keep your software updated. When an update is available, a message will pop up on your screen. Click "yes" to download the update.

Install/Uninstall

Installing Software

- To install this software, insert the CD into the CD-ROM drive of your computer.
- The software installer launches automatically. Follow the on-screen instructions to complete the installation.

Note: You will need to install all components to use this software.

Uninstalling Software

- Click the start menu on your computer taskbar and navigate to the Digital Arts & Crafts Studio software. Choose the "Uninstall" option from the menu.

New Activities and Projects!

Introductory Screen

**Click to choose
Project Studio
Software**



**Click to choose
Project Studio
Software**

The introductory screen shown may not represent the software you are installing.

- After loading the software, you will see a new introductory screen the next time you start up the Studio.
- Click the arrow buttons on the right or left of the screen to choose any Project Studio software you may have installed or the main Digital Arts & Crafts Studio software.

New Activities and Projects!

Project Studio Menu



Click here to return to the introductory screen

New Craft Projects

The project studio menu shown may not represent the software you are installing.

- Each project studio menu looks different. The menu changes for each software accessory you install.
- The project studio menu includes all new crafts and activities.

Hint: Press the project studio button  on the Studio at any time to return to the introductory screen.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)



service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB, Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2007 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA

L5269pr-0920