



Barbie
PHOTO
 FASHION™
 DOLL

6+

INSTRUCTIONS


INSTRUCTION SHEET
 SPECIFICATIONS

Toy: _____
 Toy No.: X7738/X8023(DOM)
 Part No.: 0920
 Trim Size: 30"X11"
 Folded Size: 7.5"X11"
 Type of Fold: _____
 #colors: ONE
 Colors: Black
 Paper Stork: White Offset
 Paper Weight: 70 lb
 EDM No.: _____

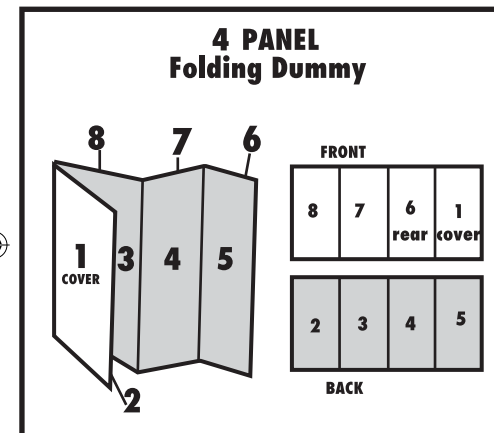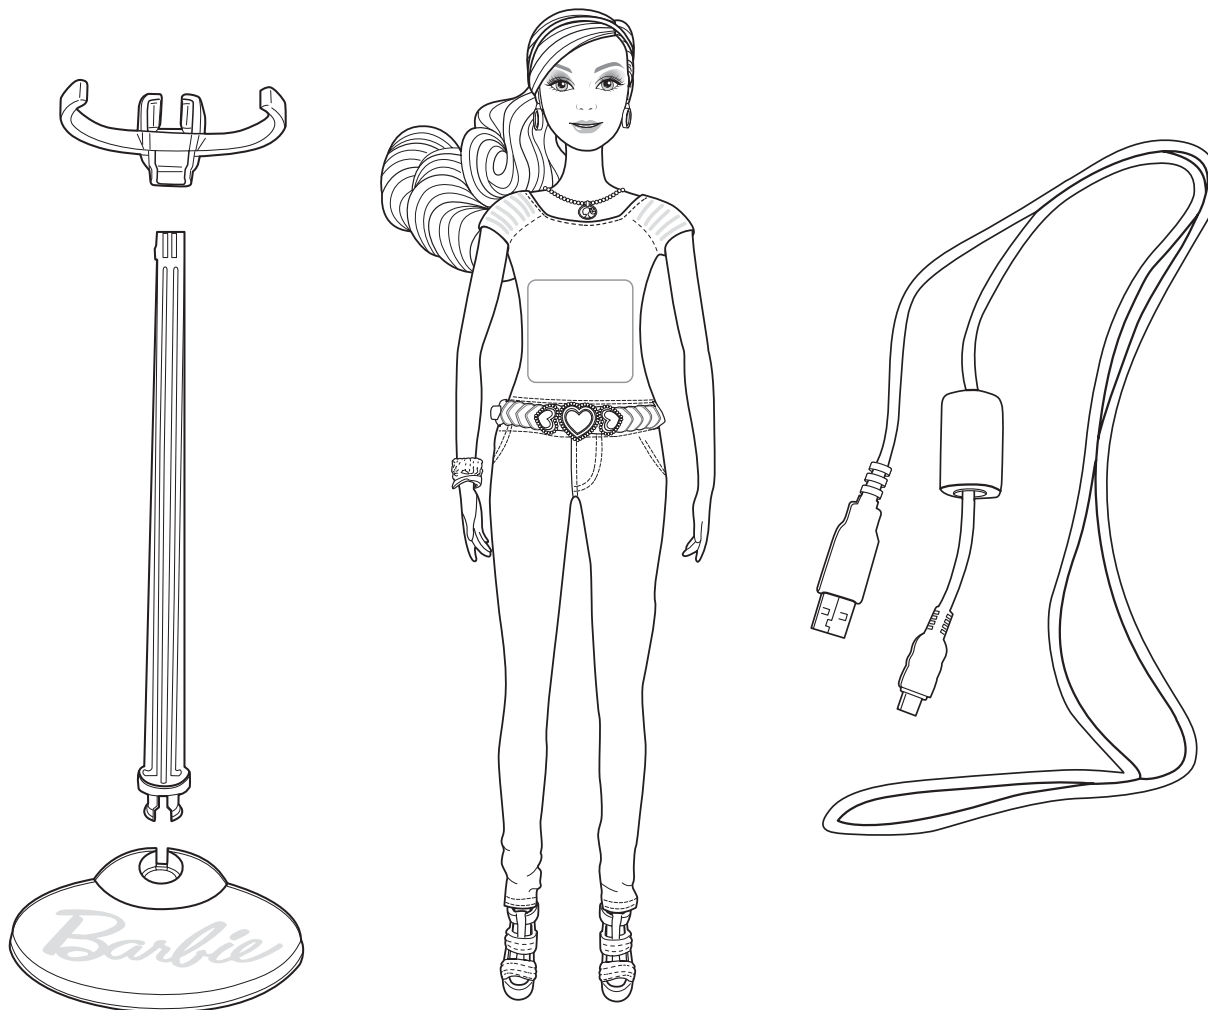


Contents: Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

GETTING STARTED

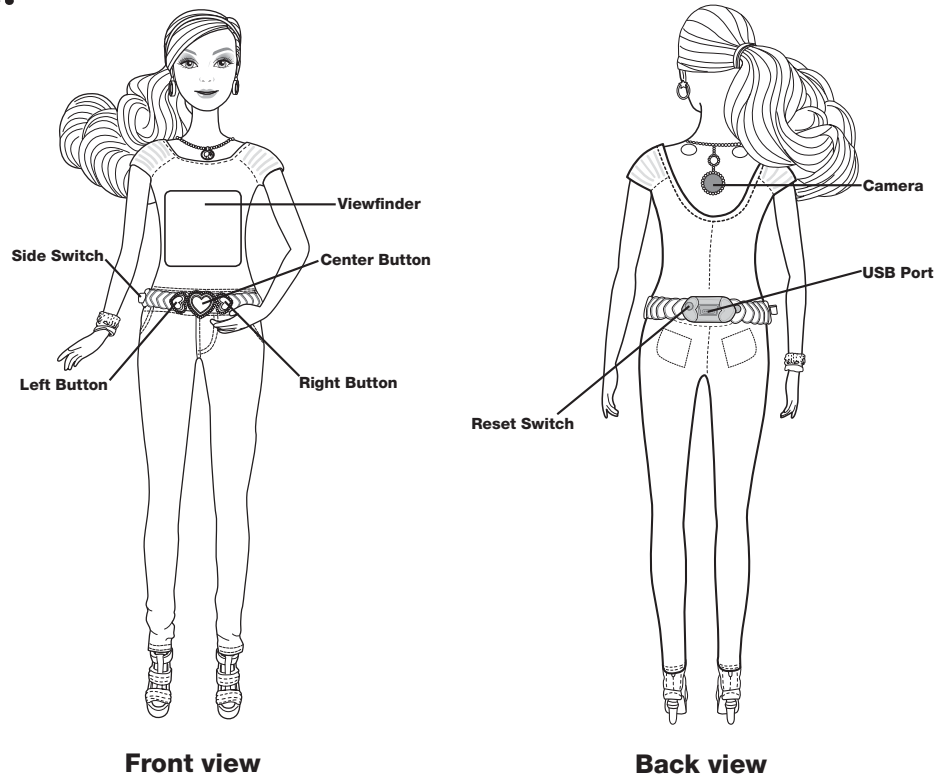



ASSEMBLE STAND

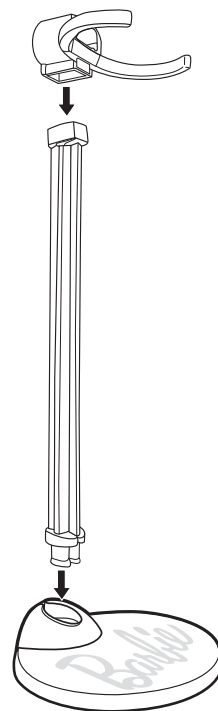

Charge

Barbie® Photo Fashion™ doll has a built-in battery that must be charged before use.

- Slide up the USB cover on Barbie® doll's back and place Barbie® Photo Fashion™ doll in the doll stand as shown.

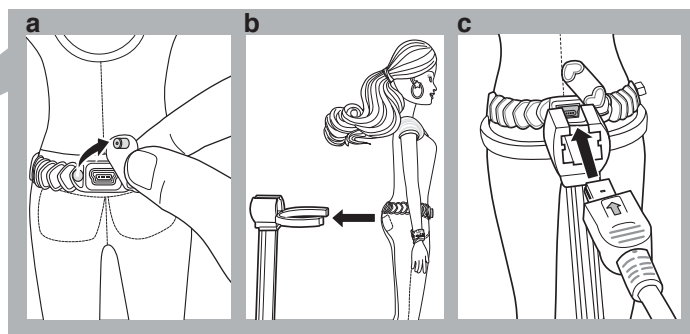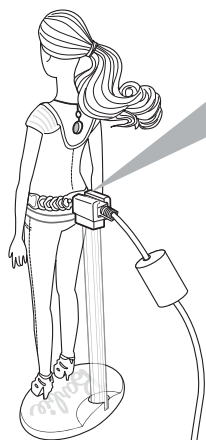

- Charge Barbie® Photo Fashion™ doll by connecting the USB cable to the doll and your computer. Prior to use, charge for about 2 hours.

- Recharge the battery when you see the "low battery" icons as shown.



CHARGING



FULLY CHARGED




**5 MINUTES OF
POWER REMAINING**




**NO POWER
REMAINING**

POWER ON

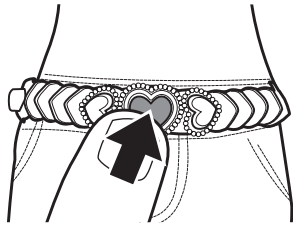


Press the CENTER BUTTON to turn power on.

TAKE PHOTOS

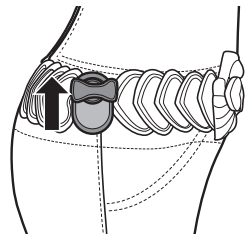



Move the SIDE SWITCH to the up position.

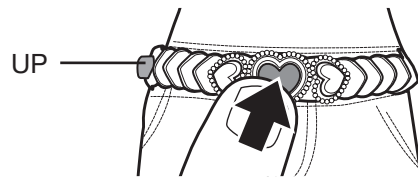


Press the CENTER BUTTON to take a photo.
Press the CENTER BUTTON again to return to VIEWFINDER or wait 15 seconds.
Press the CENTER BUTTON to take another photo.

TAKE PHOTOS WITH EFFECTS

Select desired effect before you take your photo.

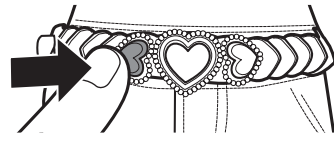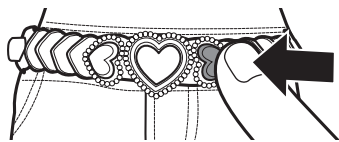

Press RIGHT BUTTON or LEFT BUTTON to choose an effect.
Keep pressing either button to view more effects.

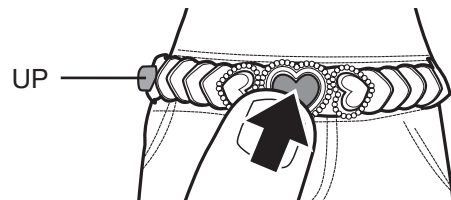


Press the CENTER BUTTON to take a photo with the selected effect.
Press the CENTER BUTTON again to return to VIEWFINDER or wait 15 seconds.
Press the CENTER BUTTON to take another photo.

POWER OFF




Hold CENTER BUTTON for 3 seconds to turn power off
OR Barbie® Photo Fashion™ doll will power down automatically
after 2 minutes of inactivity.

DISPLAY PHOTOS/SLIDESHOW

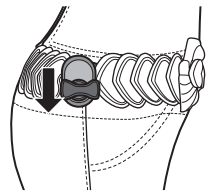


Slide SIDE SWITCH down to review photos.

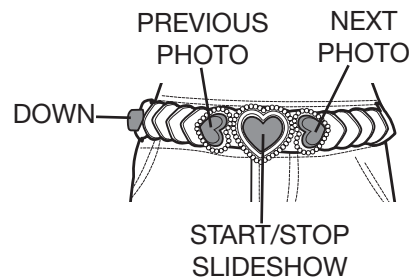

Press LEFT BUTTON to cycle images backward.
Press RIGHT BUTTON to cycle images forward.
Press CENTER BUTTON to start and stop slideshow.


DELETE PHOTO

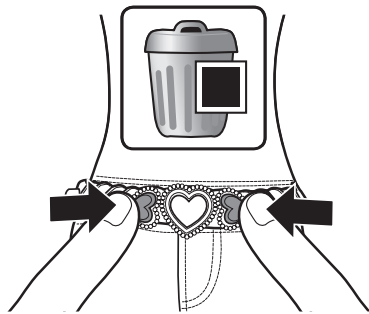

To delete one photo, press LEFT and RIGHT BUTTONS at the same time.



Release buttons and press LEFT and RIGHT BUTTONS at the same time to confirm deletion.

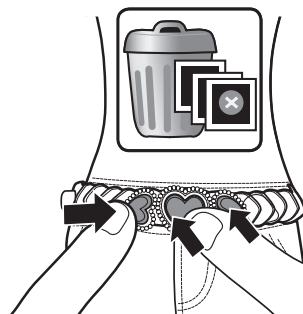


To delete ALL photos, press and hold LEFT, RIGHT, and CENTER BUTTONS at the same time.



Release all buttons and press LEFT and RIGHT BUTTONS at the same time to confirm deletion.

Note—it may take a few seconds if you are deleting many photos.

SAVE PHOTOS TO YOUR COMPUTER

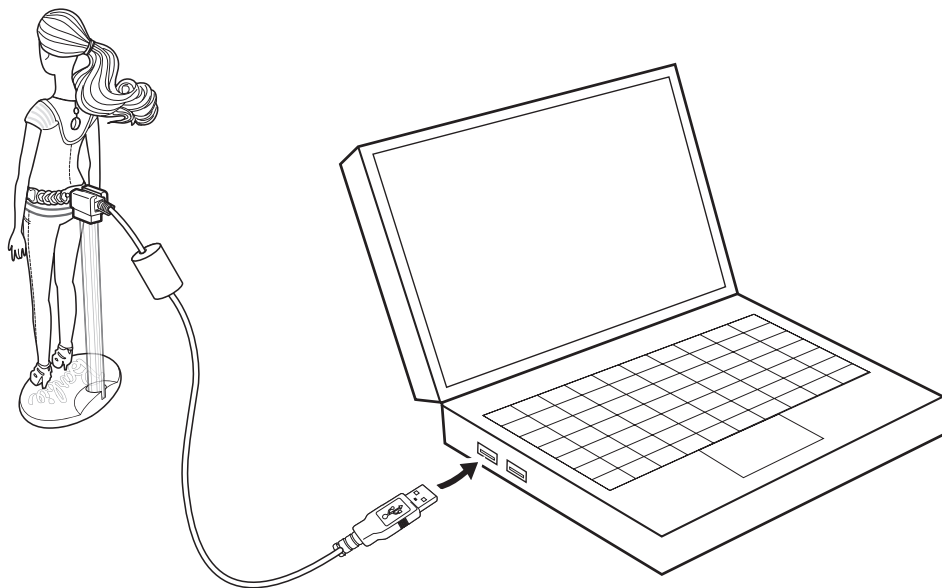

Connect Barbie® Photo Fashion™ doll to your computer with the included USB cable.

For Windows

Open Windows Explorer and navigate to the Barbie® drive. Select photos from the “DSC” folder and cut or copy them to your hard drive.

To safely remove Barbie® Photo Fashion™ doll from your computer:

- Click on “Safely Remove Hardware” in the system tray.
- Select “Barbie Photo Fashion” and wait for the “Safe to Remove Hardware” message.
- Disconnect USB cable.

For Mac

Open the Barbie® Photo Fashion™ drive on the desktop. Photos are in the “DSC” folder. Cut or copy photos to the desktop or another folder.


To eject, click the eject icon or drag the Barbie® drive to Trash. Disconnect USB cable.

SOFTWARE

Create even more custom designs with FREE downloadable software!

Go to www.barbie.com/photofashion to download and get access to 100+ design effects!

TROUBLESHOOTING

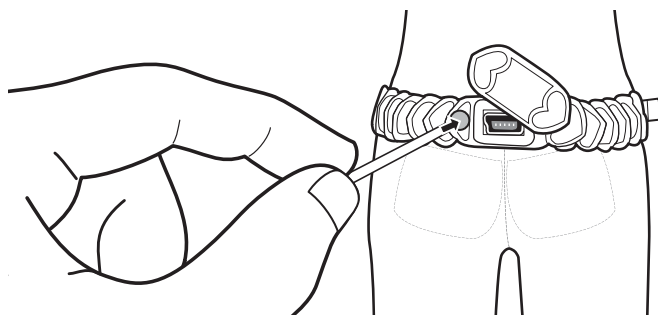

If the doll fails to respond or any other malfunction occurs, press the reset switch with a paperclip (not included) and try charging the battery.

ICON LIST



NO IMAGES SAVED




5 MINUTES POWER REMAINING



MEMORY IS FULL



NO POWER REMAINING

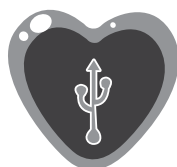

CONNECTED TO USB



DELETE ONE PHOTO



BATTERY IS CHARGING



DELETE ALL PHOTOS



FULLY CHARGED



CONFIRM DELETION

ADULTS NOTE

To remove battery for safe disposal, carefully open Barbie® Photo Fashion™ doll using a Phillips head screwdriver (not included). The battery is in the doll's right leg.

Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment.

For product sold in USA

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For product sold in Canada • Pour les produits vendus au Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

(VALID FOR CANADA ONLY • VALABLE AU CANADA SEULEMENT)

Operation is subject to the following two conditions :

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

(1) Il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

BATTERY SAFETY INFORMATION

Product includes a non-replaceable lithium polymer battery.

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Dispose of battery safely.
- Do not dispose of this product in a fire. The battery inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC).
Check your local authority for recycling advice and facilities.



DOLL SHOULD NOT BE IMMERSSED IN WATER.



N102
Z83

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697
(US and Canada only).

SERVICE.MATTEL.COM



X7738-0920
X8023

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.
Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.