 
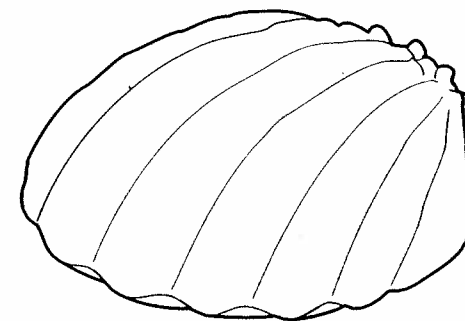 


Magical Mermaids™ Barbie® Doll & Kris

INSTRUCTIONS

CONTENTS



TWO YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Adjustment Center, 15930 E. Valley Boulevard, City of Industry, California 91744 for replacement or refund at our option. This warranty does not cover damage resulting from accident, misuse or abuse. **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

CONSUMER INFORMATION

MATTEL TOYS



YOU CAN TELL IT'S MATTEL! Call us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m. - 6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1 (800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.

Send only the product to the address above. Send all correspondence to Consumer Affairs, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday-Friday, 8:00 a.m. - 6:00 p.m. Eastern time.



WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

Colors and decorations may vary from those shown.

Please remove everything from the package and compare to the contents shown here.
If any items are missing, please call 1-800-524-TOYS.
Keep these instructions for future reference as they contain important information.



 
2683

BATTERY INSTALLATION

Toy requires two sets of replaceable AAA alkaline batteries. The shell requires 3 AAA batteries, and the mermaid tail requires 2 AAA batteries. Replace batteries when lights become weak. To install batteries, use a Phillips head screwdriver (not included) to open battery door. Remove and set aside. Insert required AAA alkaline batteries as shown. Replace battery cover and screw closed.

RECOMMENDED: Use heavy duty AAA batteries, not long life batteries.


ATTENTION: When tightening screws, make sure equal pressure is applied on all screws. Failure to do this may cause water leakage into battery compartment.

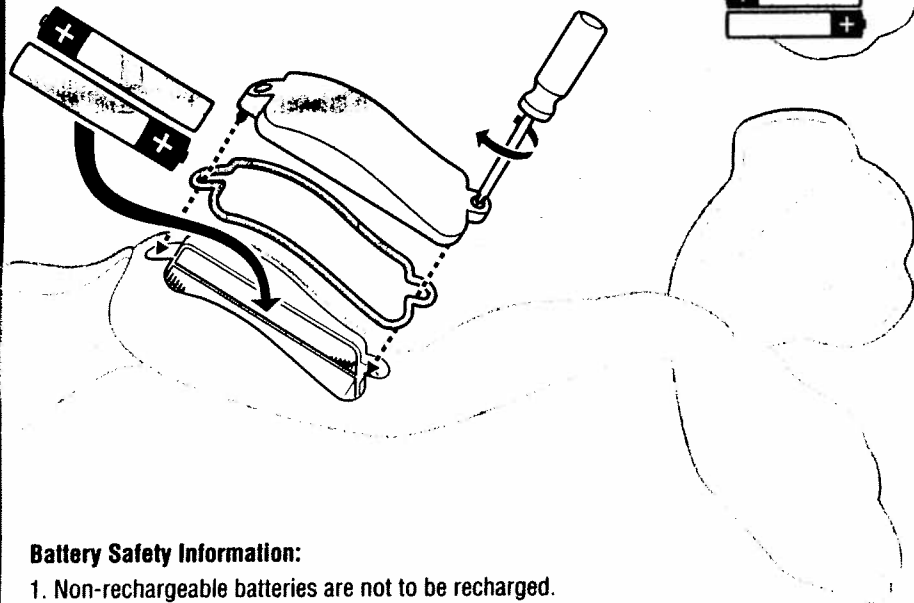


Battery Safety Information:

1. Non-rechargeable batteries are not to be recharged.
2. Do not use rechargeable batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Never mix old batteries with new batteries (replace all batteries at the same time).
5. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturer's instruction.
6. Remove batteries from product before extended storage.
7. Always remove old or dead batteries from the product.
8. The supply terminals are not to be short-circuited.
9. Check that the contact surfaces are clean and bright before installing batteries.
10. Dispose of old batteries safely.

 Shell lights up when opened.

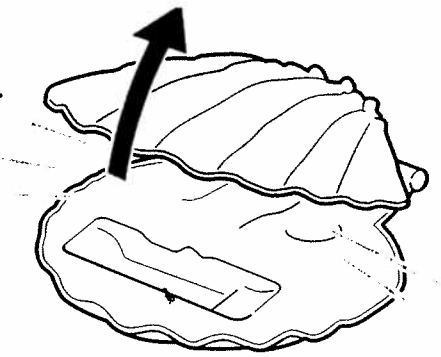

 Hold tail as shown, making sure your skin touches the sensors on each side of the tail.

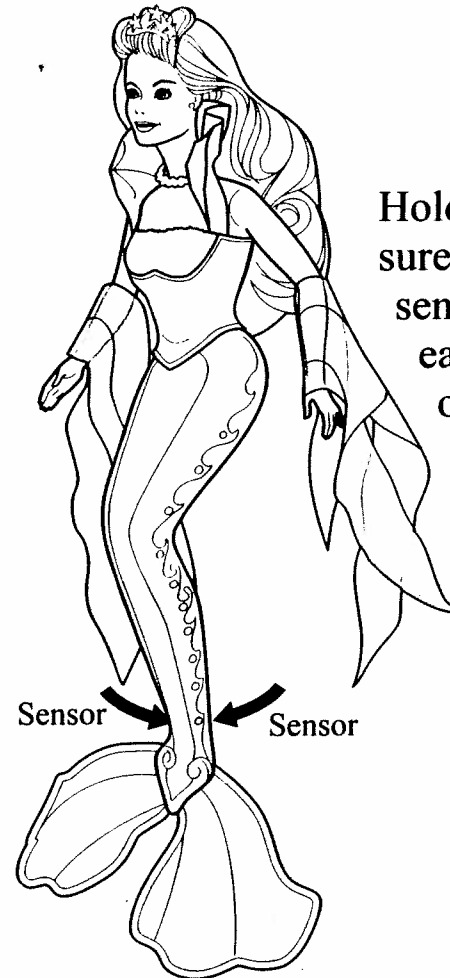

Placing the doll under water also causes the tail to light up.

Do not overtwist doll's torso.

Lights automatically turn off to preserve the battery life. For the shell, close and then reopen to turn the lights on again. For the mermaid, take your hand off and reapply. If doll is under the water, take her out and then reimmerse to turn lights on again.

NOTE: When doll is removed from water, it may take a few seconds for the lights to turn off as the water drains from the doll. • NOTE: Very dry hands, such as experienced in a desert climate, may not cause the tail to light up. • NOTE: Drain/rinse/clean/dry all items thoroughly