



Barbie® and Krissy® Doll

Bedtime Baby™

INSTRUCTIONS



CONTENTS

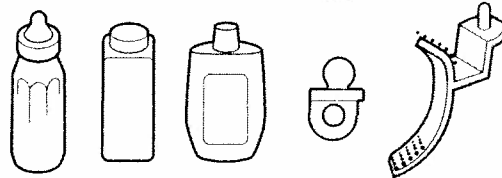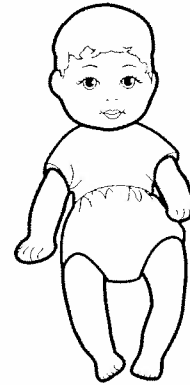

Decorations may vary from those shown. Doll cannot stand alone.
Includes 2 replaceable AG13 or LR44 alkaline button cell batteries.


Please remove everything from the package and
compare to the contents shown here.
If any items are missing, please call 1-800-524-TOYS.

Keep these instructions for future reference as they contain important information.

56616-0920



Before playing with the toy the first time, remove the tape over the battery door, then pull the PVC strap completely out. This only needs to be done this one time.

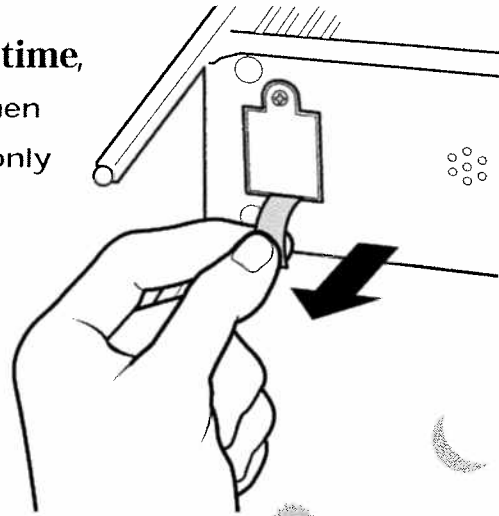

Rock baby Krissy[®] doll in her crib!




Place Krissy[®] doll in the crib, lining up the crib pin with the baby doll's back hole.




Move the crib's lever side to side. The doll moves and music plays from the crib!


The crib's side moves up and down.

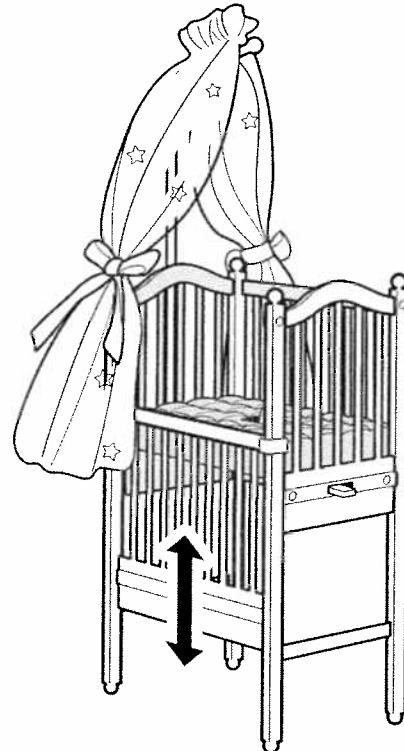


Rock baby Krissy® doll in Barbie® doll's arms!

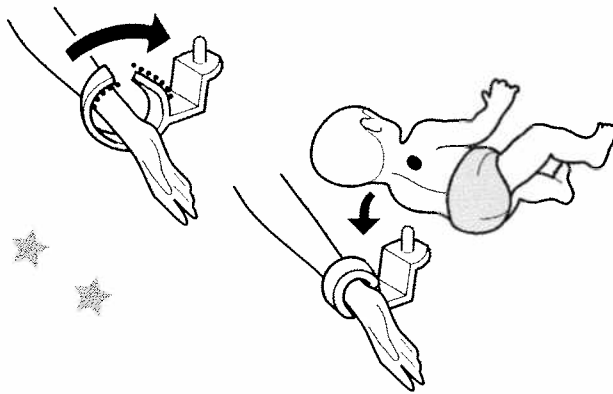

Wrap Barbie® doll's wrist band around her wrist, pressing together the fabric fastener. Place the pin into the baby doll's back hole.

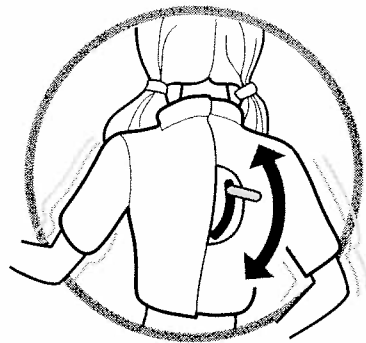


Move Barbie® doll's arms out slightly, especially the right arm. Move the lever on Barbie® doll's back to "rock" baby Krissy®.

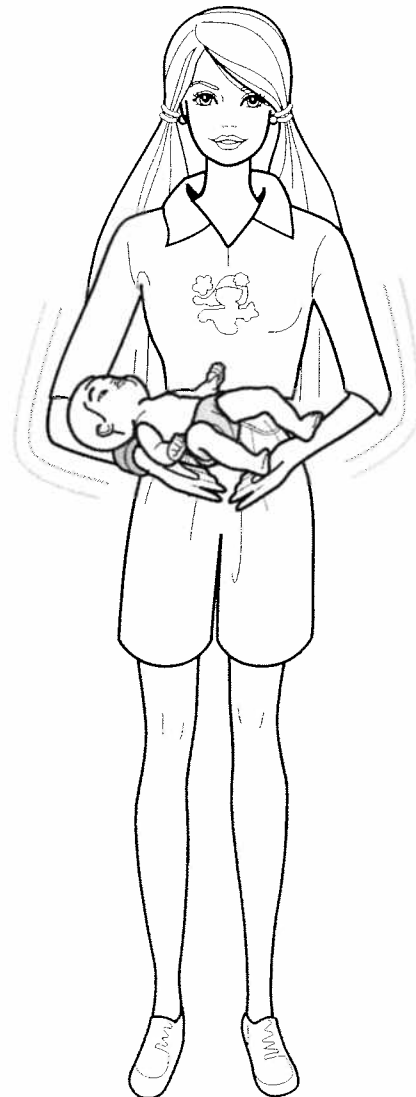

Battery Replacement

Toy includes 2 replaceable AG13 or LR44 alkaline button cell batteries. Replace batteries when sound becomes distorted. To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Remove and set aside. Insert 2 replaceable AG13 or LR44 alkaline button cell batteries as shown. Use either AG13 or LR44 alkaline batteries or equivalent. Replace battery cover and screw closed.

ATTENTION: Non-alkaline batteries may not power this toy. Replace with alkaline batteries for longest life and best performance.

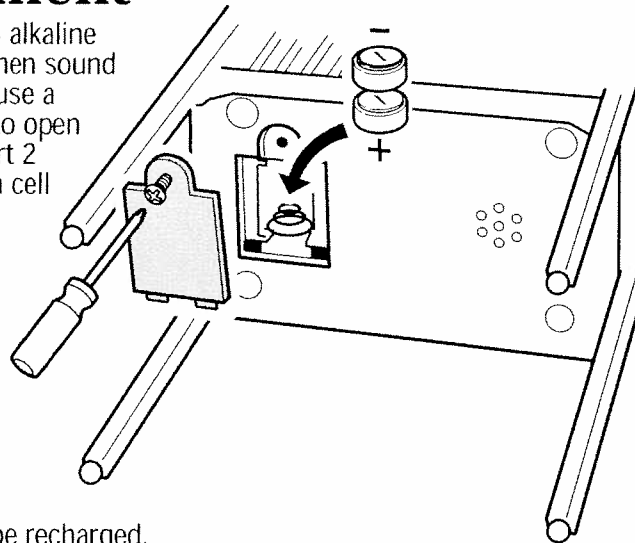

CAUTION: To avoid battery leakage:

1. Non-rechargeable batteries are not to be recharged.
2. Do not use rechargeable batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Never mix old batteries with new batteries (replace all batteries at the same time).
5. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturer's instruction.
6. Remove batteries from product before extended storage.
7. Always remove old or dead batteries from the product.
8. The supply terminals are not to be short-circuited.
9. Check that the contact surfaces are clean and bright before installing batteries.
10. Dispose of old batteries safely.

CONSUMER INFORMATION

MATTY MATTEL™ toys



YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1(800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.



WARNING:

CHOKING HAZARD – Small parts.
Not for children under 3 years.