 


INSTRUCTION SHEET SPECIFICATIONS	
Toy:	Protector Pix
Toy No.:	Y2748
Part No.:	0920
Trim Size:	22" W x 8.5" H
Folded Size:	5.5" W x 8.5" H
Type of Fold:	Ref. picture beside
# colors:	One
Colors:	BLACK
Paper Stock:	White Offset
Paper Weight:	100 lb.
EDM No.:	001

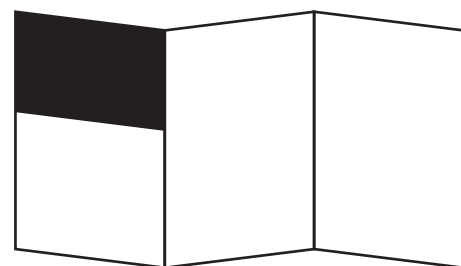

Folding Diagram

Barbie

Ages  
6+

# DIGITAL MAKEOVER

## Give Yourself a Virtual Makeover on Your iPad®!

Slide your iPad into the Barbie® Digital Makeover frame and let the makeover begin – without using real makeup! Select a color, wave the applicator wand in front of your face, and watch the makeup you selected magically appear on screen! Even more amazing, Barbie® Digital Makeover works just like a real mirror – when you move your face, your makeover will move with you! Add virtual glitter, pre-designed looks, and other digital accessories then take pictures to save and customize!



Made for iPad (4th generation), iPad mini, iPad (3rd generation), iPad 2. iOS 6.0 or above required.

## CONTENTS




Requires 3 "AA" alkaline batteries (not included). Dispose of batteries safely.

Keep these instructions for future reference as they contain important information.

## BATTERY INSTALLATION

1. Open battery cover on underside of console with Phillips head screwdriver (not included).
2. Install 3 new "AA" alkaline (LR6) batteries in the orientation (+/-) shown.
3. Replace battery cover and tighten the screw.

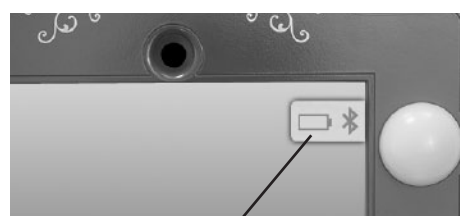


Battery Meter

Replace batteries when the battery meter in the upper right corner of Barbie® Digital Makeover no longer has any bars.

The Barbie® Digital Makeover console **automatically turns itself off** when you remove your iPad from the frame or when the app has not been running for 15 minutes.

**NOTE:** The console **does not** charge your iPad.

## ASSEMBLY

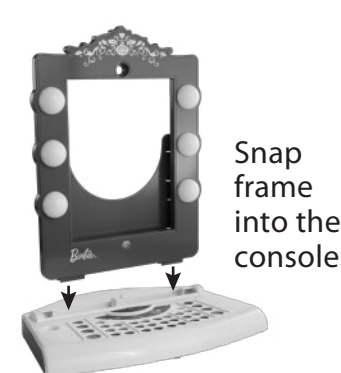

Snap frame into the console.

### INSERTING YOUR iPad (4th generation), iPad (3rd generation), iPad 2

Slide your iPad all the way into the frame, making sure the camera is visible through the hole at the top of the frame.




### INSERTING YOUR iPad mini

Insert your iPad mini into the adapter as shown.

Slide the adapter with iPad mini all the way into the frame, making sure the camera is visible through the hole at the top of the frame.



### SECURING THE LATCH

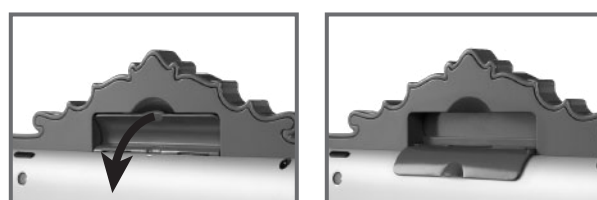

Fold the latch on the back of the frame down until it snaps in place to secure your iPad.

### ADJUSTING THE FRAME

The frame can be tilted into multiple positions for the best viewing angle.



## RETURNING TO THE HOME SCREEN

You can return to the iPad home screen at any time by pressing the Jewel Button at the bottom of the frame. If you are using an iPad mini, you will need to press the Home button on the iPad mini.



Jewel Button

## BLUETOOTH® PAIRING

You only need to complete **Bluetooth** pairing the first time you use an iPad with Barbie® Digital Makeover.

The iPad must be inserted in the Barbie® Digital Makeover frame to pair with it.

Touch the Settings icon on your iPad.



Settings Icon

Touch "**Bluetooth**" then move the slider to "On."



When your iPad detects the Barbie® Digital Makeover console, "Digital Makeover" will appear in the Devices list. Touch "Digital Makeover" to pair with your iPad.

**IMPORTANT:** If you don't pair within 60 seconds, the function will time out. If you want to try again to pair your iPad and console, just lift the iPad up a few inches within the frame, then slide it back down.

### USING A SECOND IPAD


If you have more than one iPad that you want to use with Barbie® Digital Makeover, turn off **Bluetooth** in the first iPad before pairing and using the second iPad.

## INSTALLING THE APP

Once Barbie® Digital Makeover pairs with your iPad, a dialog box will prompt you to go to the App Store to download the free app.

Touch "App Store" and you will be taken to the App Store page where you can install the Barbie® Digital Makeover app.

Barbie® Digital Makeover prompts you to download the app **only** the first time you pair with your iPad. If you touch "Ignore" at that time, you will need to go to the App Store on your own, search for Barbie® Digital Makeover, and download the free app.

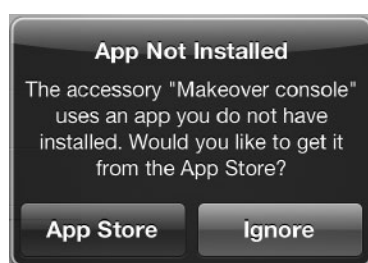

## LAUNCHING THE APP

Make sure **Bluetooth** is enabled on your iPad.

Insert your iPad in the Barbie® Digital Makeover frame. A dialog box will appear. Touch "Allow" and the lights on the frame will glow and the app will automatically launch.

You can also launch the app manually. Touch the Barbie® Digital Makeover app icon on your home screen.



## GETTING HELP

You can find tutorials that explain all the different features of Barbie® Digital Makeover. Just touch the "Help" icon in the upper left corner of the screen whenever you have any questions.



Help Icon

## EXITING THE APP

You can exit the app at any time by pressing the Jewel Button at the bottom of the frame. If you are using an iPad mini, you will need to press the Home button on the iPad mini.



Jewel Button

## TROUBLESHOOTING

### If Barbie® Digital Makeover has trouble tracking your face...

Barbie® Digital Makeover works best in moderate room lighting. Direct sunlight on your face can decrease the accuracy of the app's facial tracking. If you are having problems, try moving Barbie® Digital Makeover into an area with less light.

### If Barbie® Digital Makeover has trouble tracking the applicator wand...

A blue background or blue clothing can make it difficult for the app to see the applicator wand. If you are having problems, move into an area with a neutral background and/or change your shirt or cover your shoulders with a neutral-colored towel.

### If the lights on Barbie® Digital Makeover don't turn on...

If the lights aren't on, that means your iPad is not communicating with the console via **Bluetooth**.

- Go to Settings and enable **Bluetooth**, then lift up your iPad a few inches and slide it back down to reset the console.
- Make sure the console is paired to your iPad.
- Turn off **Bluetooth** in any nearby iPad that has been paired with the console.

### This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.**



©2013 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel S.R.L. Italy, ViaVall Business Park, Madonhead SLP 4018, Helpline 01628 500303. Mattel Australia Pty Ltd, Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd, Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Dierport & Oedertan Oetli Mattel SEA Ptd Ltd, 099532-91 Lot 11.5, 13th Floor, Menara Lela Hwa, Persiaran Tropicana Golf Country Resort, 47410 P. Malaysia. Tel: 03-78803872. Fax: 03-78803867. Mattel Europa B.V., Gonderl 1, 1186MJ Amstelveen, Nederland.



Apple, the Apple logo and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. "Made for iPad" means that an electronic accessory has been designed to connect specifically to iPad and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPad may affect wireless performance.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Mattel, Inc. is under license. Other trademarks and trade names are those of their respective owners.

We reserve the right to terminate the Barbie® Digital Makeover application after August 16, 2015.

Y2748-0920



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.