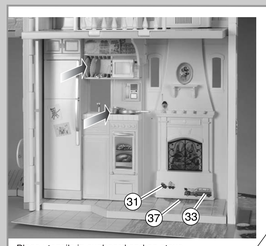

Place utensils in cupboard and on stove.
Store parts in stove.

TO PLAY Move power switch to "ON".

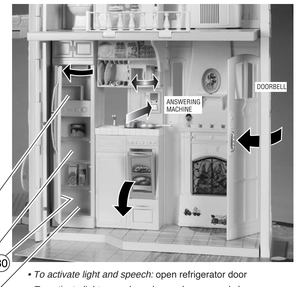



- *To activate light and speech:* open refrigerator door
- *To activate light, sounds and speech:* open and close microwave door.
- *To activate random sounds and speech:* open door.
- *To activate "doorbell" sounds:* press doorbell.

ANSWERING MACHINE: If light is not flashing, press button to make a call. If phone rings and light flashes, press button to hear a message.

ASSEMBLE TABLE & CHAIRS

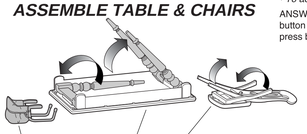

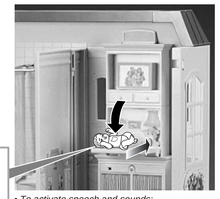

- *To activate speech and sounds:* place baby (sold separately, not included) on changing table.
- *To activate light and sounds:* press button on lamp.

Doll not included."

- *To activate sounds and speech:* open door, lift seat or push faucet.

- *To activate music and speech:* press button.

This button can also be used for outside accessories (sold separately).

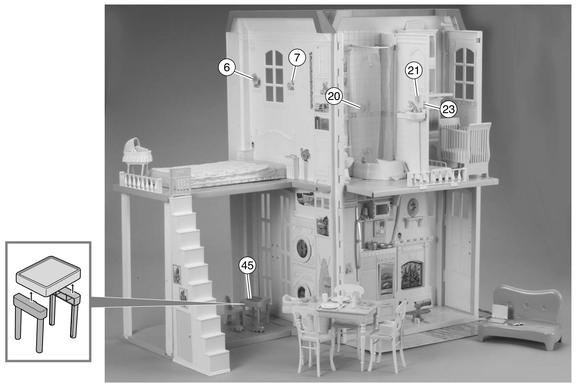

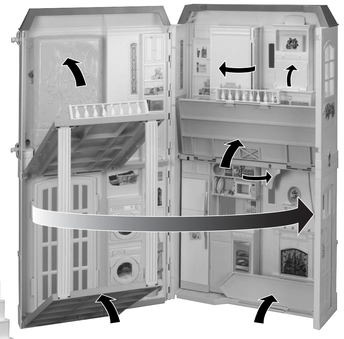

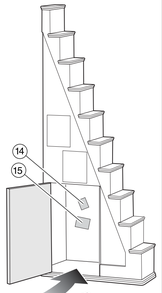

STORAGE: Remove stairs and fold up floors. Swing the two sides together and snap shut.

CONSUMER INFORMATION

YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continential Blvd.
El Segundo, CA 90245 USA

1(800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.
Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China

Dimport & Diedarkan Oleh: Mattel SEA Pte Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

Barbie

happy family Neighborhood

INSTRUCTIONS

3+

G8562-0920

ADULT ASSEMBLY REQUIRED. Requires three (3) "AA" alkaline batteries (not included).

WARNING: CHOKING HAZARD - Toy contains small parts.
Not for children under 3 years.

CONTENTS: Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-TOYS.
Keep these instructions for future reference as they contain important information.
Colors and decorations may vary.

© 2004 Mattel, Inc. El Segundo, CA 90245. U.S.A. All Rights Reserved.

Apply labels as you prepare house for play.

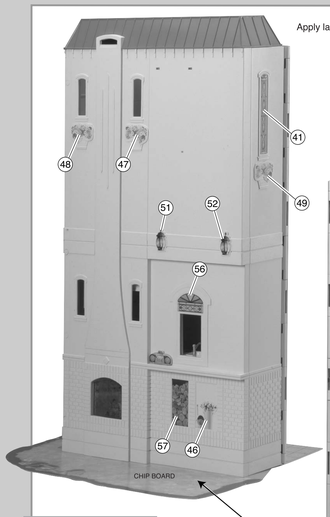

Lower latches and swing house open.

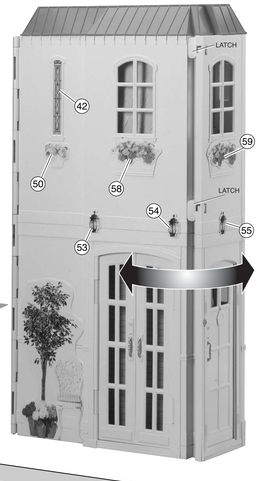

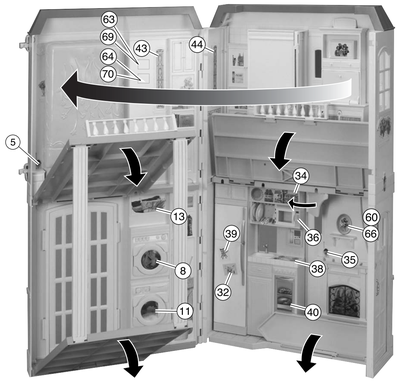

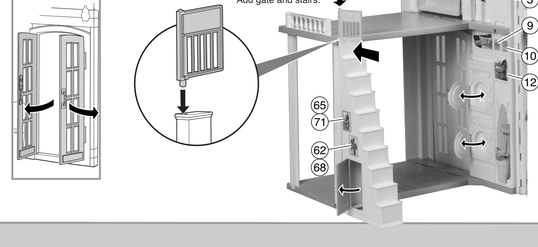

Add gate and stairs.

FOLD, THEN PLACE FOOD CHIPS INSIDE REFRIGERATOR

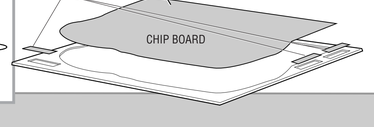

CURTAIN ROD

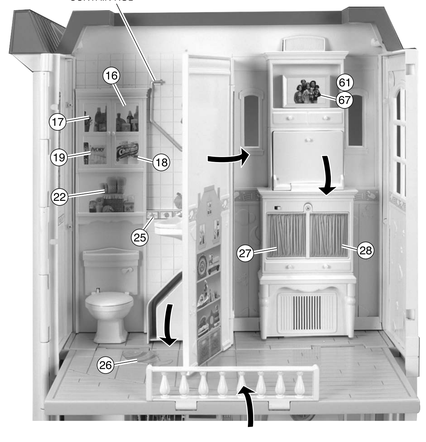

REPLACE BATTERIES

Using a Phillips head screwdriver, remove battery cover and insert 3 "AA" alkaline batteries (not included). Replace cover.

Replace bateries when sounds and phrases become garbled.

Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.

ON/OFF SWITCH

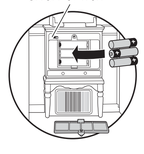

Unsnap curtain rod and slide on the shower curtains. Snap into brackets for play. Drop down for storage.

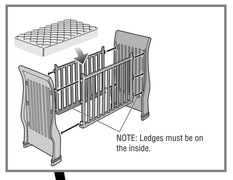

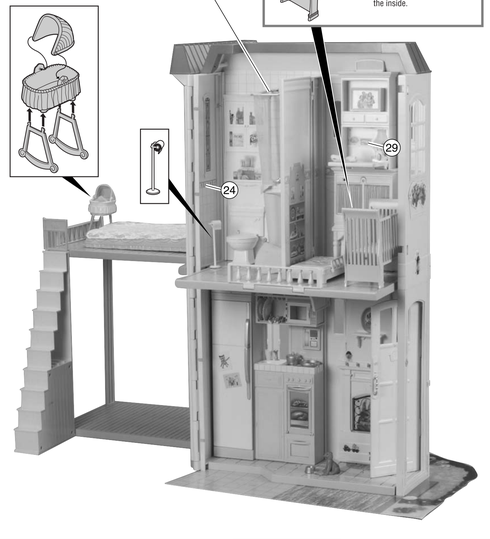

INSTRUCTION SHEET SPECIFICATIONS

Toy:	Barbie Happy Family House
Toy No.:	G8562
Part No.:	0920
Trim Size:	34 " W x 11" H
Folded Size:	8.5 " W x 11 " H
Type of Fold:	3 folds
# colors:	One
Colors:	Black
Paper Stock:	White Offset
Paper Weight:	70 lb.
EDM No.:	

4 PANEL Folding Dummy



All elements and process colors on this contract proof must be matched.

Die-Cut | Black

LLEE	OM
0920	10/19/04
Happy Family Mid-Price	ARTWORK PREPARATION
1C: Black	Illustrator CS2 Illustrator 8.0.1
Vertical, PW	Preset: Adobe PDF Photoshop 6.0.1
	Apply appropriate trapping and output curve.
	MAPS: 133 LPI